
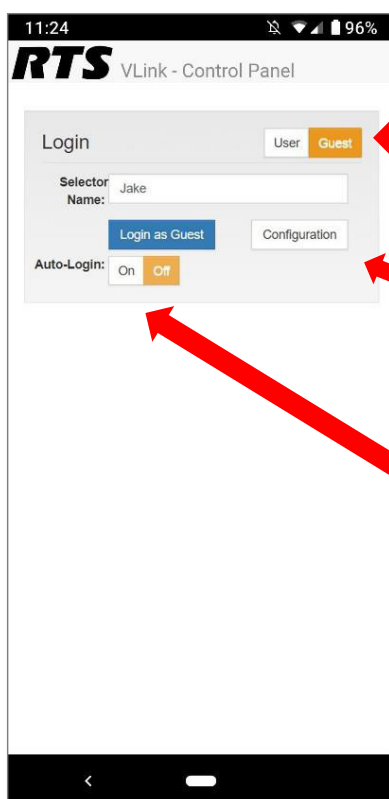


### VLink WebRTC

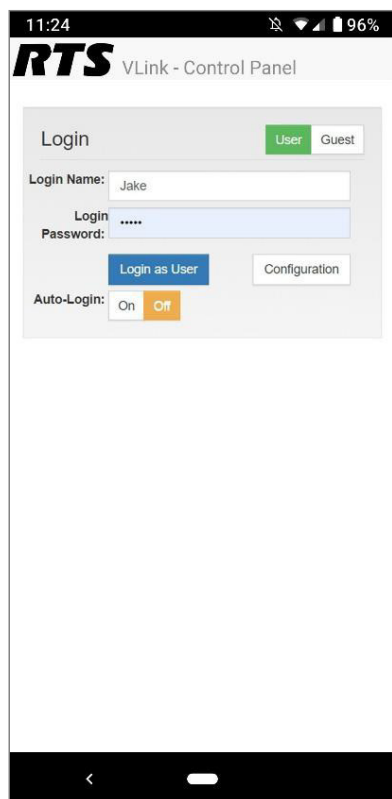

#### Switch between User and Guest login

By default, VLink allows for guests to login to the system. Unlike a User login, a Guest login does not need to be setup before the user can login.

#### Configuration


The configuration button allows you to change which VLink server you are connected to. This is usually left to default.

#### Auto-Login

If Auto-Login is switched to On the user will automatically be logged in when accessing the Control Panel.

Speak to all users  
The multi-user icon indicates this is a party line

Video selector

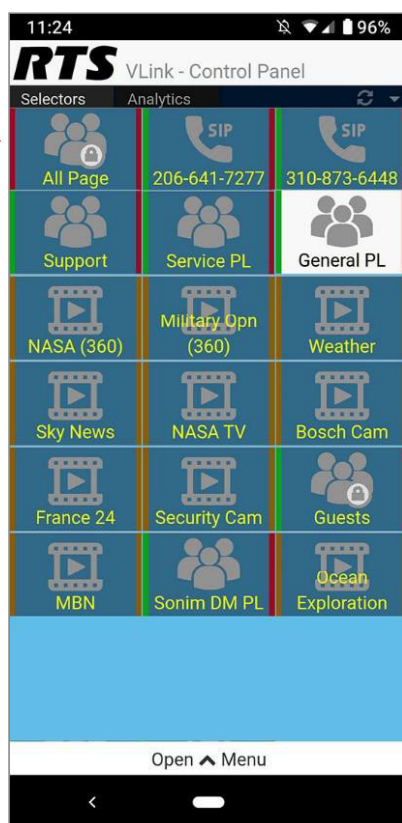


#### Selectors

After logging in you will see an array of selectors. A white selector indicates that user is speaking.




Tap the green bar to listen to a user and tap the red bar to speak.

Click the Open Menu button for more features.

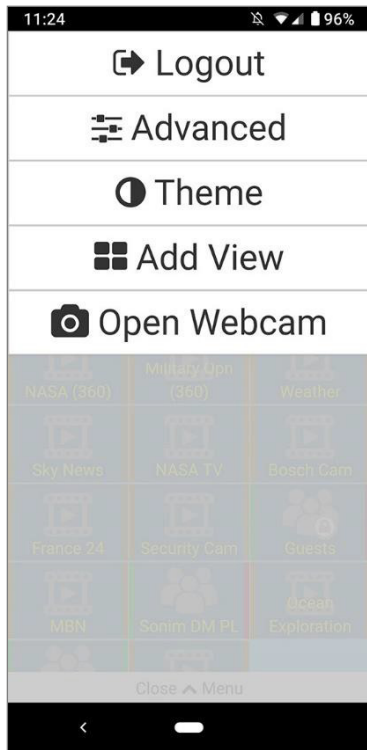

- Additional settings and features
- Change the selector style
- Open new windows ex: geolocation
- Tap this button to open the camera viewfinder and live-streaming settings.

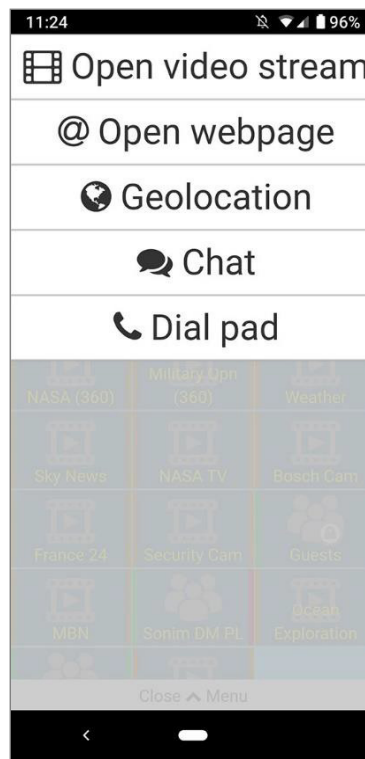

- View a video stream from a URL or IP address
- Open a webpage to use from within VCOM
- View the location of other users on a global map
- Send instant messages to other users (may be unavailable on your Control Panel)
- Dial phone numbers and call out from preconfigured SIP phone lines

Tap and drag a window's title to move it and resize it

