


# Quick Start Guide OMI-2 - OMNEO Matrix Interface

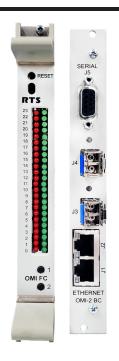

#### Included:

- · Safety Instructions ST-CO
- · OMI-2 Quick Start Guide
- 2 Screw Panhead, M2.5 x 10.0
- Back Card Assy., OMI-2
- Front Card, 64 CH, OMI-2 or

Front Card, 48 CH, OMI-2

Front Card, 32 CH, OMI-2

or

Front Card, 16 CH, OMI-2

### Requirements:

You must have the following:

- Screwdriver
- · AZedit version 3.5
- IPEdit version 3.4
- MCII-e version 2.9

#### ADAM-M Frame Installation


Important: ..... Up to four (4) OMI-2 card sets can be used in an ADAM M frame at a time.

To install the OMI-2 card sets into the ADAM-M frame, do the following:


- Using the Installation CD, follow the instructions in the readme.txt file to install all the required software needed for OMNEO functionality.
- Gently insert the OMI-2 front card into the appropriate ADAM M slot.

**NOTE**: Take care to insert the card properly, as shown.

- 3. Using the card ejectors tighten down the **front card by pushing it into the slot**.
- 4. On the back of the ADAM-M frame, carefully insert the **OMI-2 back card**, taking care to align it with the OMI-2 front card, as shown above.

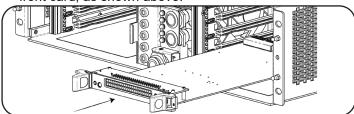

5. Ensure the **OMI-2 back card** is seated properly against the OMI-2 front card and is sitting firmly in the frame.

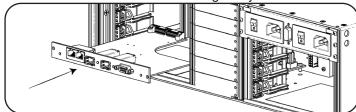


- 6. Using the supplied screws, tighten the **OMI-2 back card** to the frame.
- 7. Ensure the **card ejectors** are tightened to the chassis on the OMI-2 front card.

#### ADAM Frame Installation


**Important**: .... Up to eight (8) OMI-2 card sets can be used in an ADAM frame at a time.

To install the OMI-2 card sets into the ADAM frame, do the following:

 Gently insert the OMI-2 front card into the appropriate ADAM slot.

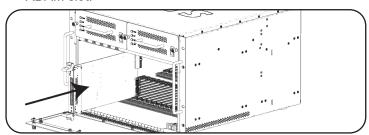

- 2. Using the card ejectors. tighten down the front card.
- On the back of the ADAM frame, carefully insert the OMI-2 back card, aligning it with the OMI-2 front card.

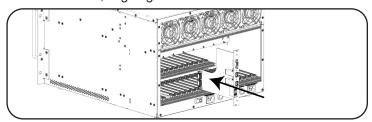

- 4. Ensure the **OMI-2 back card** is seated properly against the OMI-2 front card and is sitting firmly in the frame.
- 5. Using the supplied screws, tighten the **OMI-2 back card** to the frame.
- Ensure the card ejectors are tightened to the chassis on the OMI-2 front card.

For the most current user documentation, firmware, and software, visit www.rtsintercoms.com.



# Quick Start Guide OMI-2 - OMNEO Matrix Interface

# Cabling DB-9 Connector Pinouts RS-232 Mode

Pin 1	N/A
Pin 2	RS232-TXD Output
Pin 3	RS232-RXD Input
Pin 4	N/A
Pin 5	Ground
Pin 6	N/A
Pin 7	N/A
Pin 8	N/A
Pin 9	N/A
RS-485 Mode	
Pin 1	N/A
Pin 2	RS485+
Pin 3	RS485-
Pin 4	N/A
Pin 5	Ground
Pin 6	N/A
Pin 7	N/A
Pin 8	N/A
	N/A
Ethernet 1000/100/10	
Pin 1 BI_DA+	Bi-directional pair A+
Pin 2 BI_DA	Bi-directional pair A-
Pin 3 BI_DB+	Bi-directional pair B+
Pin 4 BI_DC+	Bi-directional pair C+
Pin 5 BI_DC	Bi-directional pair C-
Pin 6 BI-DB	Bi-directional pair B-
Pin 7 BI_DD+	Bi-directional pair D+
Pin 8 BI_DD	Bi-directional pair D-

### Configuration

Consult the OMI-2 Technical Manual (P/N F.01U.261.047) for specific instructions to complete the following steps.

To **configure the OMI-2 card in AZedit**, do the following:

- Step 1: Download the License File for more channels, if applicable.
- Step 2: Assign ports to the card using the Port Allocation table.
- Step 3: Set up the network configuration.
- Step 4: Configure Keypanels to the OMI cards.

To **configure the OMI-2 card in IPedit**, do the following:

- Step 1: Using AZedit, download the License File for more channels, if applicable.
- Step 2: Add the OMI-2 to IPedit, using Add Device.
- Step 3: Set up the network configuration.
- Step 4: Configure keypanels to the OMI cards.

## System Drawing

Single subnet system with less than 128 OMNEO nodes:

