


LCP-32/16 Level Control Panel Installation Guide



The LCP-32/16 Level Control Panel is connected to KP-32 Keypanels and additional LCP-32/16 panels, as shown in the diagram below. Configuration instructions are included on the back of this document. A maximum of three (3) LCP-32/16 panels may be connected to one KP-32 keypanel.

CAUTION: Do not connect a KP-32 power supply to the LCP-32/16. Doing so could cause damage to the unit.

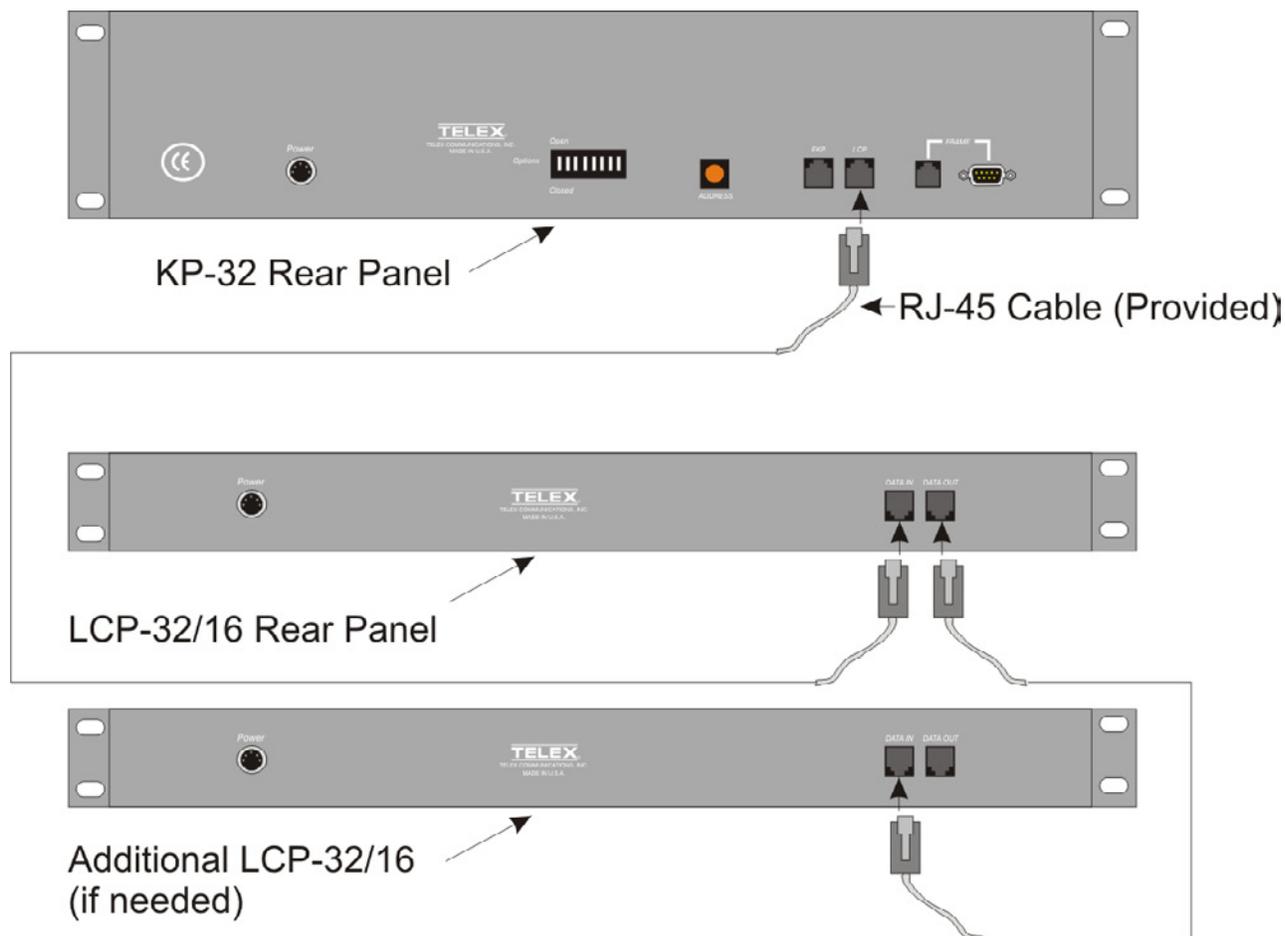

The LCP-32/16 can be connected to a KP-32 and used without any additional intervention. Up to three (3) LCP-32/16 panels can be connected. They are assigned in order of their connection. The first LCP-32/16 connected to a KP-32 is assigned (by default) to keys 1-16. The second LCP-32/16 is connected to the first LCP-32/16 and is assigned (by default) to keys 17-32. The third LCP-32/16 is connected to the second LCP-32/16 and is assigned (by default) to keys 33-48. The only time the KP-32 needs to be configured for use with an LCP-32/16 is when the KP-32's LCP-32/16 settings have changed from their defaults, or when you need to change the settings from their defaults, such as when an LCP-32/16 is only needed on keys 17-32.

To **change the LCP-32/16 configuration on the KP-32**, do the following:

1. Press the **MENU** key.
Display appears in the CWW (Call Waiting Window).
2. Press the ↓↓ to scroll to Service.
3. Press the **PGM** key.
Aux Inputs appears in the CWW.
4. Press the ↓↓ to scroll to LCP-32.
5. Press the **PGM** key.
1-16: Yes or 1-16: Skip appears in the CWW.
6. Enable or disable the **LCP-32/16 key assignments** by using the FWD key.
7. Press the ↓↓ again and 17-32: Yes or 17-32: Skip appears in the CWW.
8. Enable or disable the **LCP-32/16 key assignments** by using the FWD key.
9. Press the ↓↓ again and 33-48: Yes or 33-48: Skip appears in the CWW.
10. Enable or disable the **LCP-32/16 key assignments** by using the FWD key.
11. Press the **CLR** key to exit the menu.